

BARCODE SCANNER SETUP GUIDE



HT1925_05282014

TABLE OF CONTENTS

Equipment In Box	Page 1
Barcode Scanner P	Page 1
Equipment Included P	Page 2
Barcode Scanner P	Page 2
Link Pole P	Page 2
Base	Page 2
Saddle Stand P	Page 2
Weight Plate P	Page 2
Screws	Page 2
Barcode Scanner Booklet P	Page 2
Assembly	Page 3
Assembly Guide P	Page 3
Configuration P	Page 3
Barcode Scanner Booklet P	Page 3
Using Barcodes in Hospitality P	Page 3
Festing P	Page 4
Testing in Notepad P	Page 4
Froubleshooting P	Page 4
USB P	Page 4

EQUIPMENT IN THE BOX



EQUIPMENT INCLUDED



2

ASSEMBLY GUIDE



You can distinguish the version based on the first 10 digits of the S/N. For example: If S/N is 10D6100CQBXXXXXXXX, it

For example: If S/N is 10D6100CQBXXXXXXXXX, it is 1.0 version.

CONFIGURATION

BARCODE SCANNER BOOKLET

The barcode scanner booklet can be used to change the mode of the barcode scanner. This is done by scanning specific barcodes to toggle between continuous scan, trigger scan, and several other scan modes. This booklet also has a barcode which resets the scanner to factory defaults.

USING BARCODES IN HOSPITALITY



- Barcodes on Kitchen Tickets
- 1. Select Manager > Printers
- 2. Select the remote printer. Select Edit.
- 3. Select "Include barcode for fast ticket recall"

USING BARCODES IN HOSPITALITY (CONTINUED)



Barcodes on Guest Checks

- 1. Select Manager > System > Receipts
- 2. Select "Print barcode on guest checks"

TESTING

TESTING ON NOTEPAD

- 1. Exit to Windows Desktop
- 2. Select Windows Start Menu
- 3. Navigate to All Programs > Accessories > Notepad
- 4. Ensure that the cursor is flashing in notepad
- 5. Scan a barcode

Scanning a barcode should generate the UPC (the numeric form of the barcode) in Notepad. This can be tested on any item with a barcode. If the barcode scanner is unable to scan a barcode, contact your support team.

TROUBLESHOOTING

USB

The barcode scanner is a plug and play device. If the barcode scanner is unable to perform any of the steps listed above, unplug the barcode scanner and connect it to a different USB port. If this does not resolve the issue, contact your support team.