

# PROGRAMMING LBS/OZ FOR PD-II CAL MODE OPTIONS

These instructions are for PDII's that the right hand switch says lb/oz

1. Make sure that the scale is off. Remove the platter. Remove the calibration bolts and plate located on the top front of the scale.
2. After removing the calibration bolts and plate you will see a white micro switch at the bottom of the hole. Press and hold down the micro switch and turn on the scale.
3. The display will read "CAL" → "Ver XXX" → "C-0". Release the micro-switch. Press the [ # ] key until the display shows "C-4". Replace the platter. ( " # " is to increase and "lb/oz" is to decrease the value )
4. Press the [ ZERO ] key and display should read "C41 XX". Press [ ZERO ] to go to the next step " C42 XX " → " C43 XX " → " C44 XX " → " C45 XX " → " C46 XX ".
5. Depending on the capacity and function, enter the value "XX" step by step. Press "# " to move the digit and "\*" or lb/oz " to change the value. ( see chart below)
6. Note: For the setting "C42" for all capacities single range is "38" and dual range is what is in the chart below.
7. The settings for the capacity and single/dual range must follow what is on the serial number plate or else the scale will not be NTEP or legal for trade subject to being RED tagged and subject to a fine by Weights and Measures.

<b>C41</b>	<b>C44</b>	What the scale does
C8	80	Starts up in lb and can be switched to oz
d0	80	Starts up in oz and can be switched to lb

	15lb/300oz	30lb/600oz	60lb/1000oz	150lb/2000oz
C41	C8	C8	C8	C8
C42	1A	3A	4A	62
C43	00	00	00	00
C44	80	80	80	80
C45	00	00	00	00
C46	00	00	00	00

8. Press the [ ZERO ] key. Display shows "C4 End" then "C-4".
9. Press "\*" or lb/oz " until the display shows "C-0".
10. Press the [ ZERO ] key and scale will do its count up test cycle and then go to "0" which is back to normal mode

**\* Make sure to calibrate the scale in lbs or kg before using.**

## **CHANGING TYPE SETTINGS**

1. Make sure that power is OFF. While pressing “# “key, then turn on the power. Display will show “EcrSEt “. Then current ECR type is shown on the display as “tYPE-2 “.
2. If you select ERC type 5, press the “# “key until the display shows it.
3. To save the current type, press the ZERO Key. Display will go back to “0 “.